

REPLACEMENT PARTS LIST

Ref. No.	Part Number	Description
200	6348Q-E037T	PDP-NP50C2MF01 (T/A REQ)
201	6871QDH051A	PWB-DSP YDRV ASSY (PD4225)
202	6871QDH052A	PWB-DSP YDRV ASSY (PD4225)
203	6871QCH025A	PWB-CONTROL ASSY (PD4225)
204	6871QYH027A	PWB-YSUS ASSY (PD4225)
205	6871QRH034A	PWB-XRRT ASSY (PD4225)
206	6871QZH030A	PWB-ZSUS (PD4225)
300	3211V00126B	FRAME-ASSY FRONT
305	5230V00016A	SCREEN SHIELD (FILTER)
400	3809V00A58E	FRAME-COVER REAR
401	3301V00010S	PLATE-ASSY
410	3809V00A47N	COVER-BACK ASSY
510	6871QCH025A	PWB-CONTROL ASSY (PD4225)
520	6871VMMP39F	PWB-MAIN (PD4225)
540	6871VSMV04A	PWB-PSW (PD4225)
541	5020V00666D	BUTTON-POWER
550	6871VSMU98B	PWB-AV (PD4225)
560	6871VSMU45A	PWB-SPK (PD4225)
570	6871VSMX52B	PWB-SUB VIDEO ASSY (PD4225)
580	3501V00148A	BOARD-ASSY (POWER)
	6850J00002A	CABLE-DVI
	6410VUH005A	CORD-POWER AC
	I/B PD4225S	OWNERS GUIDE
	6710V00129A	REMOTE
	SPEAKER-PD4225S	SPEAKER ASSEMBLY
	4980V00464B	SPEAKER-BRACKET (RIGHT)
	4980V00460A	SPEAKER-BRACKET (LEFT)